

# Password Recovery

Your original password was “**12345678**” which is **eight characters**. If you have changed your password and now can't remember it don't panic! It's simple to recover it.

## Step 1

Remove your memory card and using the supplied card reader insert the card into your computer.


## Step 2

Open the memory card and then open the “CONFIG” folder.




## Step 3

“right-click” the “config.bin” file and select open with notepad.

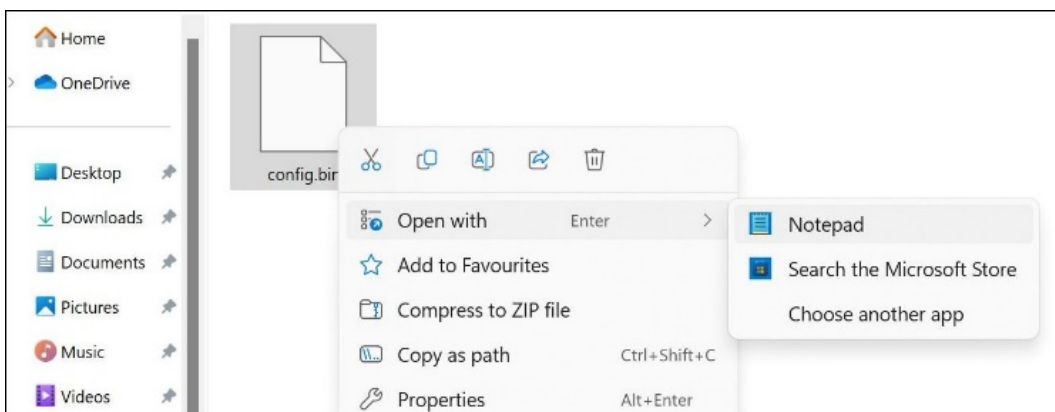

## Step 4

Your password can be seen by scrolling across as in the below example image.

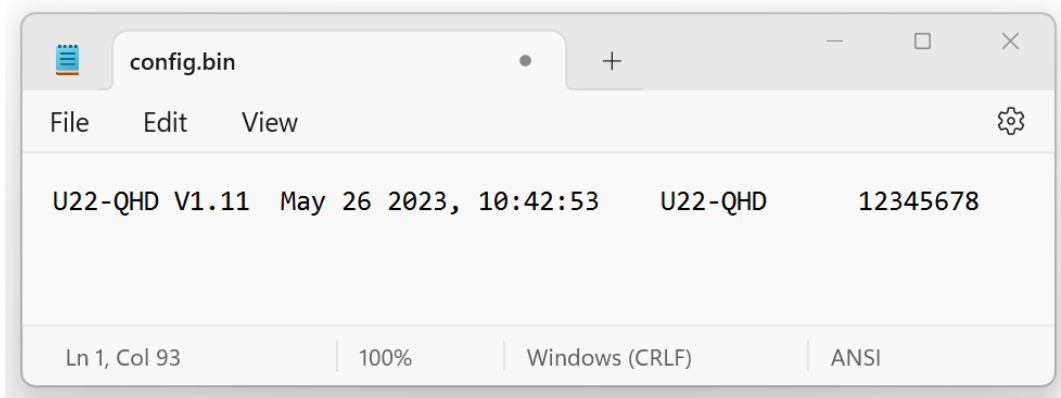

## Step 5

Put the memory card back in your camera and after waiting thirty seconds or so for the camera to reboot you should now be able to connect to it.